


Power Brake Exchange

260 Phelan Ave. San Jose, Ca. 95112 Ph. (408) 292-1305 Fax (408) 294-6817

Technical Bulletin – HB

HYDROBOOST CHANGING TIPS BEFORE REMOVING THE OLD UNIT:

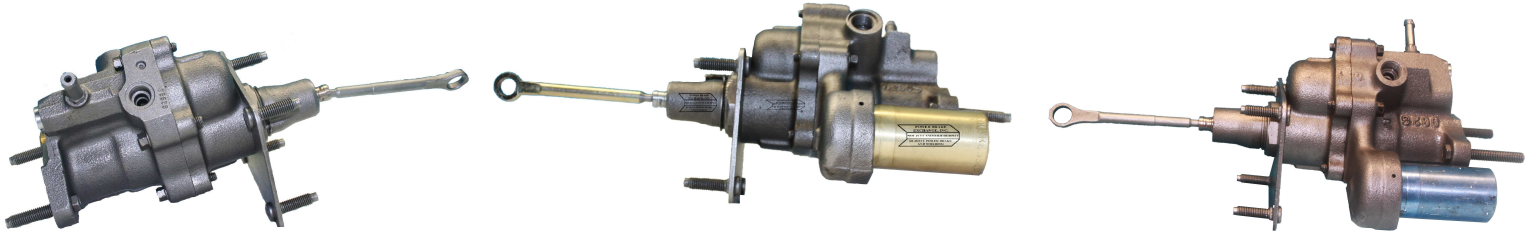

1. Disable Ignition.
2. Pour a couple of quarts of transmission fluid through power steering reservoir.
(Transmission fluid has a cleaning agent)
3. Remove the return line and place in a large container.
4. Start cranking the engine. This should flush out any dirt.
5. Clean out the transmission fluid.
6. Clean out the pressure relief valve in the power steering pump.
(This is located behind a nut in the pressure hose.)
7. Replace the hydroboost.
8. With all the lines tightened up, put in the recommended Power Steering Fluid.
9. Crank the engine, but do not start it until fluid is throughout the steering system. Reconnect the ignition. Attach the master. Start engine, turning the steering wheel to the right and kink it. Step on the brake pedal three times, then turn to the left and repeat until the fluid stops foaming.

DO NOT KEEP THE TRANSMISSION FLUID IN THE BOOSTER.
MAKE SURE YOU REPLACE THE TRANSMISSION FLUID WITH
POWER STEERING FLUID AFTER YOU HAVE CLEANED OUT THE
SYSTEM!!!!